

Operating Manual

**Process photometer
for free chlorine and total/bounded chlorine**

**AQUACON CHLOR
(PC- Cabinet)**

May 2011

Fillerkampsweg 1 – 5 • 31832 Springe OT Eldagsen • Tel.: 0049(0)5044/887-0 (Fax: -99)





E-Mail: info@iotronic.de




Internet: <http://www.iotronic.de>

1	GENERAL GUIDELINES FOR SAFETY	3
2	PRINCIPLE OF OPERATION	4
3	DESCRIPTION OF THE PROCESS PHOTOMETER	4
3.1	Analytical Part	7
3.2	Measurement and Control	7
3.3	Operation and Measurement Security	7
3.4	Automatic Operation	8
3.5	Manual Operation	9
3.6	Display/Set Parameters	10
3.6.1	Limit Value 1 (min contact)	11
3.6.2	Limit Value 2 (max contact)	11
3.6.3	Analog Output setting (mode, start value and end value)	11
3.6.4	Sampling Interval	12
3.6.5	Titer/Calibration Factor	12
3.6.6	Rinsing Time	12
3.6.7	Reagent Volume	12
3.6.8	2. Parameter	12
4	SWITCHING FUNCTIONS OF THE AQUACON CHLOR	13
4.1	External Switching	13
4.2	Display in the standby mode	13
4.3	Analysis state relay	13
4.4	Limit Value Relay 1 and 2	14
4.5	Alarm Limit Relay	14
4.6	Current Output	14
5	START-UP AND MAINTENANCE INSTRUCTIONS	15

5.1	Connection of sample water	15
5.2	Connection of reagent, bleeding of pumps and tubes	15
5.3	Replenishment of Reagent	15
5.4	Changing of Tube box	16
5.5	Recalibration of the Process analyzer	16
5.6	Maintenance interval	16
5.7	Shut down procedure	16
6	ALARM MESSAGES	17
7	TECHNICAL DATA	17
8	SPECIFICATIONS	18
9	CONNECTION DIAGRAM	18
9.1	Set 0/4 - 20 mA-Output	18
9.2	Connections	19
9.3	Installation	20
10	APPENDIX	21
10.1	Analysis cycle AQUACON CHLOR	21
10.2	Spare part and consumable item list	22
11	TROUBLESHOOTING GUIDE	23

1 General Guidelines for Safety

	WARNING	(Non-observance or misapplication of the contents of the “Warning” section could lead to serious accident, including death or injury)
Turn off the power supply.	Working without disconnecting the power supply may cause an electrical shock. Before engaging upon any working procedures make sure to disconnect the power supply.	 Electrical Shock
No remodelling !	Never remodel an analyzer. Otherwise, a serious accident may result. IOTRONIC will not be responsible for any accident or damage of any kind which is caused by the user remodelling the analyzer.	 No Remodeling
Operating site must be free of water and humidity	The analytical instrument is not designed to be water-proof or dust-proof. The use of the analyzer in places where water splashes or humidity is high may result in an electrical shock or short-circuit.	 Prohibited

	CAUTION !	(Non-observance or misapplication of the contents of the “Caution” section could lead to serious physical injury to the user or serious damage to the product.)
Specified power only	Do not operate the analyzer on voltage which is not specified on the label on the right side of the transmitter housing. Failure to do so can result in damage or fire. Only the specified power level is to be applied.	 Caution
Do not damage or change power cable !	Do not scratch, damage, process, or pull the power cable forcibly. Non-observance could cause a fire or an electrical shock.	 Caution

Notes on operation

- Dropping the device or subjecting it to strong impacts may result in faulty performance. Handle the analyzer with care.
- Select an installation site convenient for future maintenance and inspection, and fix the device carefully so that it is free of vibrations.

2 Principle of Operation

The process photometer AQUACON CHLOR performs a discontinuous photometric determination of the concentration of free chlorine and of total/bounded chlorine in water. The entire operation, which includes filling and rinsing of the measuring cuvette, is controlled by a microprocessor.


A special developed reagent (CL-R1001) based on N-N-Diethyl-p-phenylendiaminsulfat (DPD) and a buffering solution (CL-R1002 for free chlorine, CL-R1003 for total chlorine) are added via a peristaltic pump and mixed with the water sample in the measuring chamber. The color formed as a result of the reaction is detected by the monochromatic photometric detection system built into the measuring chamber. The measured absorbance is a function of the chlorine concentration.

The concentration of free chlorine (Cl_2), hypochlorous (HOCl), hypochlorite (OCl^-) is measured as first parameter and displayed on the touchscreen as ppm free Cl_2 . The concentration of total chlorine or bounded chlorine (depends on parameter setting, see chapter 3.6.8) is measured as second parameter and displayed on the touchscreen as ppm total Cl_2 or as ppm bounded Cl_2 .

3 Description of the Process Photometer


The process photometer is delivered completely mounted in a polycarbonate wall cabinet, ready for installation. This includes all the components for sample and drain connection, measurement chamber, reagent pumps, display and connections for remote display and control. All functions of the process photometer can be operated via touchscreen.

View of the process photometer AQUACON CHLOR

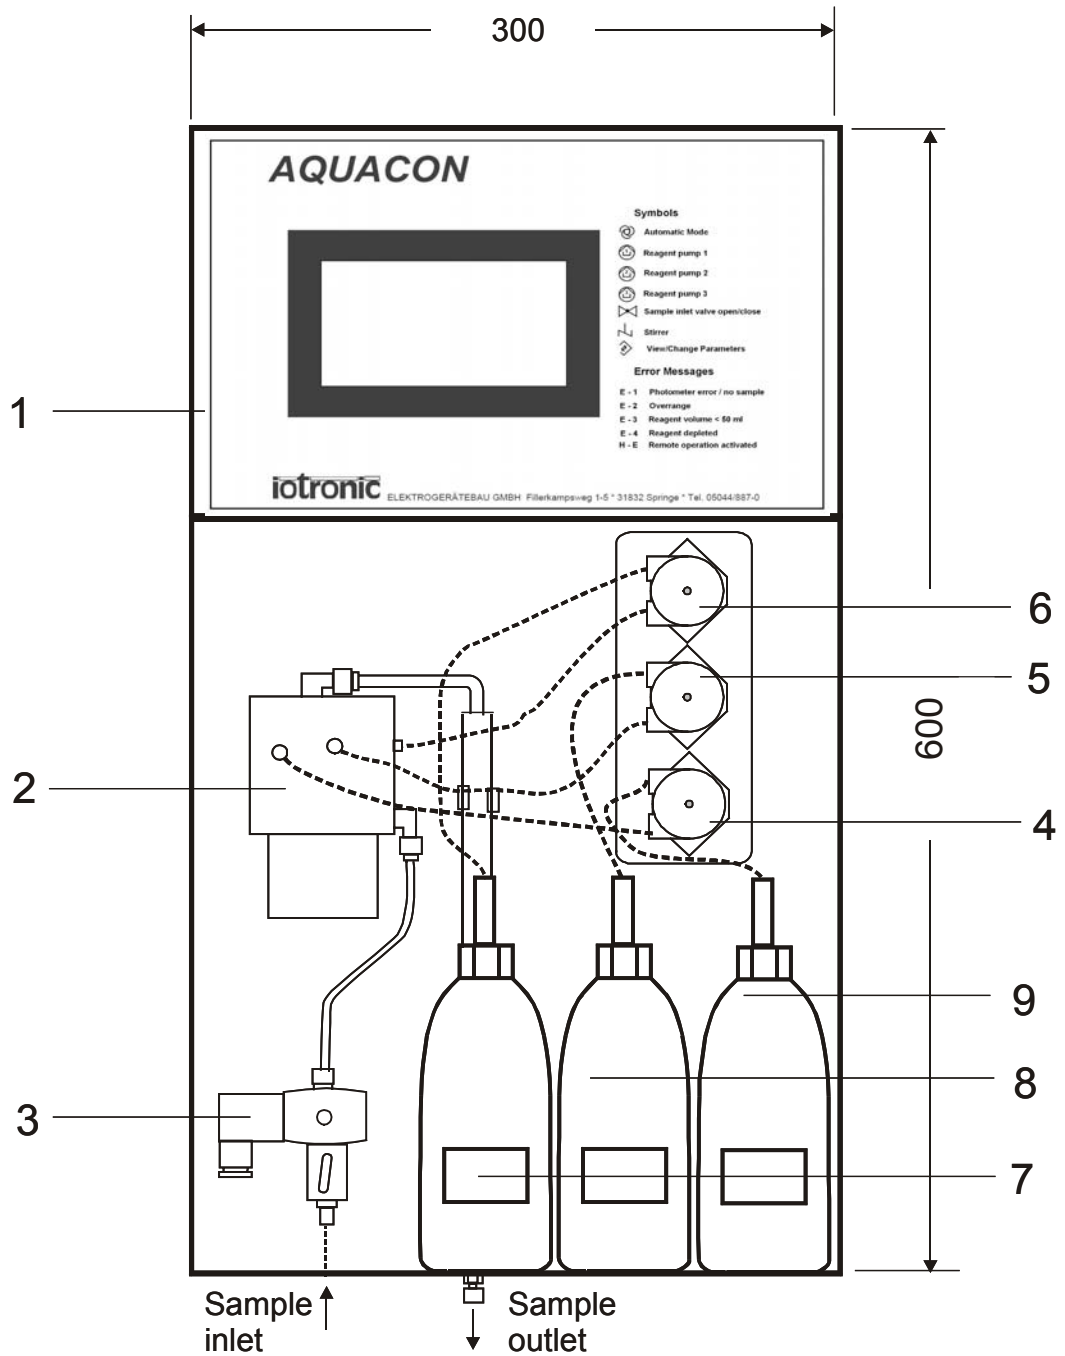

- 1 Transmitter
- 2 Measuring chamber
- 3 Sample inlet valve
- 4,5,6 Reagent tube pump
- 7 Reagent 1 vessel (250 ml)
- 8 Reagent 2 vessel (250 ml)
- 9 Reagent 3 vessel (250 ml)

AQUACON CHLOR Display and Keyboard

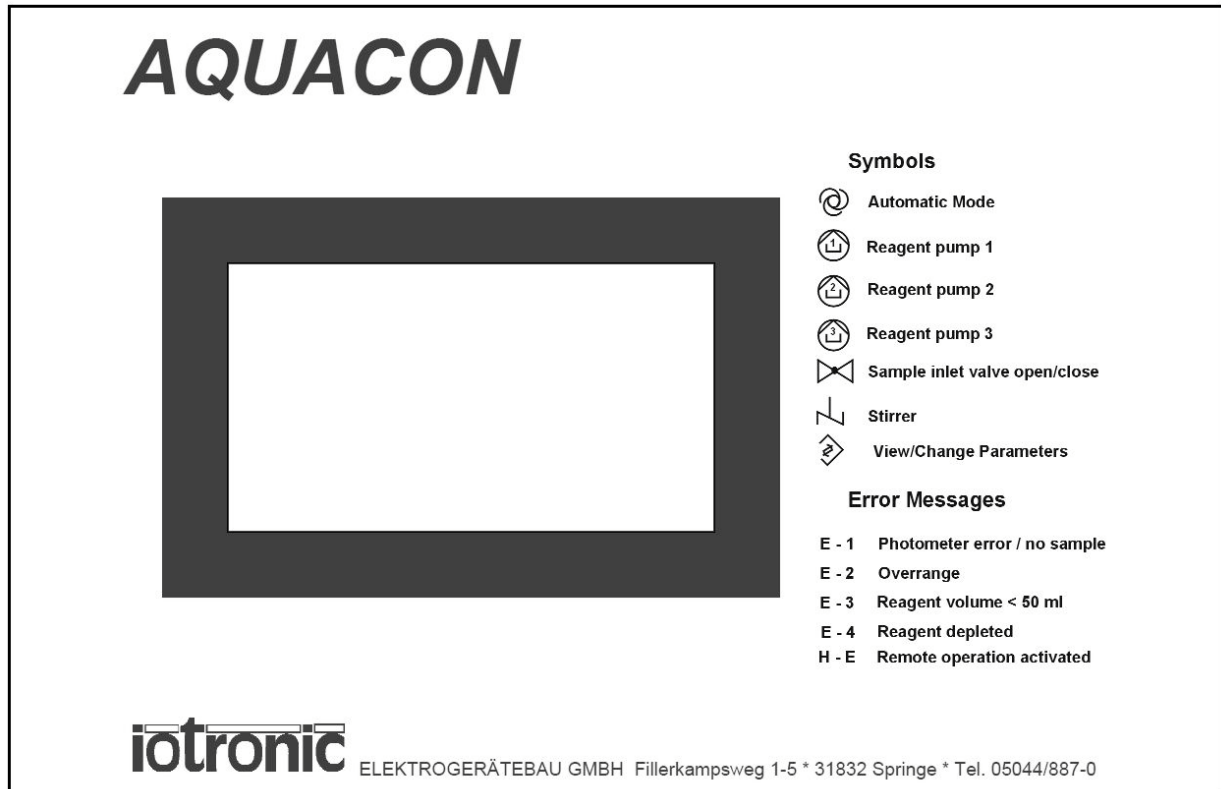

Explanation of Symbols

Symbol	Function
	Select Automatic Mode, start an analysis
	Reagent pump 1 on/off
	Reagent pump 2 on/off
	Reagent pump 3 on/off
	Sample inlet valve open/close
	Stirrer on/off
	View / Change parameters

3.1 Analytical Part

The transmitter of the process photometer AQUACON CHLOR is contained in a compact housing and includes the microprocessor which recognizes the absorbance (extinction), displays the final calculated result on a touch screen and controls the operation of the process photometer with respect to sampling, rinsing of the measurement chamber, dosing of the reagent and surveillance of the photodetection system.

3.2 Measurement and Control

Inside the control unit of the analyzer, there is one limit value relay with min-function mode and one limit value relay with max-function mode.

The relay with min-function mode is assigned to free chlorine and will be activated when the measured value for free chlorine is below the end-user defined first limit value (see chapter 3.6.1).

The relay with max-function mode is assigned to total/bounded chlorine and will be activated if the actual measured value for total/bounded chlorine is higher than the second limit value set by the user (see chapter 3.6.2).

In addition, two 0/4 - 20 mA current outputs deliver a signal which is proportional to the measured values (see chapter 9.1). The start value and the end value of the output range are freely programmable for the concentration of free chlorine and of total/bounded chlorine. (see chapter 3.6.3).

All user-defined settings are maintained during power failure to the instrument.

3.3 Operation and Measurement Security

When the end-user defined maximum alarm value is exceeded or when an error occurs (ERROR E-1 to ERROR E-4) the alarm relay will activate.

The actual reagent volume of reagent 1 is calculated by the microprocessor and is corrected for usage after each analysis. Once the calculated remaining reagent volume falls below the factory-predetermined value of 50 ml, an alarm message (ERROR E-3) is displayed on the touchscreen and the alarm relay (found on the transmitter terminal connector) is activated. The remaining 50 ml reagent is sufficient for appr. 185 analyses. Should this alarm be ignored and the reagent is depleted, a second alarm message (ERROR E-4) is displayed on the touchscreen, subsequent relay activation is initiated by the process photometer AQUACON CHLOR and the analyzer stops.

The optical transparency of the measurement cuvette is measured at the start of each analysis. An automatic zero adjustment takes place before each measurement to compensate colored or turbid samples or discoloration/contamination of the cuvette windows.

Once the factory-predetermined limit to the zero adjustment is exceeded, another alarm message (ERROR E-1) is displayed on the touchscreen, the alarm relay is activated and the analysis cycle is interrupted. In the event of sample failure, the photometer will detect this and display the alarm message ERROR E-1 on the touchscreen, activate the alarm relay and interrupt the measurement.

When the sample interval defined by the end-user has elapsed, the process photometer will automatically resume measurement as normal and repeat the procedure until sample flow is re-established. The analysis cycle may be interrupted at any stage by touching the button "Hand" or the button "Param" on the touchscreen. The process photometer remains in manual operation mode until the automatic mode is selected by pressing the appropriate symbol or touch button.

3.4 Automatic Operation

The process photometer will automatically carry out an analysis once the "Start" button is pressed.

On the return of power, following a power failure, the process photometer will automatically enter the automatic mode and starts a measurement. This is displayed as state "MEASURING".

On the touchscreen, the last actual measured values for free chlorine and for total chlorine or bounded chlorine are displayed. If the result of analysis is lower than the low measuring limit of the analyzer, the display shows "0,00 ppm". Below the last measured value, the set parameters for "Limit value 1" and "Limit value 2" are displayed. This values can be parametrized by the end-user (see chapter 3.6).

AQUACON CHLOR		
State:	MEASURING	
free	0,10 ppm	<input type="button" value="Start"/>
total	0,10 ppm	
Limit value 1:	0.30	<input type="button" value="Hand"/>
Limit value 2:	2.00	<input type="button" value="Param"/>


The automatic analysis cycle can be interrupted at any stage by touching the button "Hand" or the button "Param" on the touchscreen (see 3.5). After the finish of the analysis, the new measured value will be displayed on the touchscreen and the analyzer state is changed to "STANDBY".

When the upper measurement range is exceeded, the alarm message "ERROR E-2" is displayed as state on the touchscreen and the alarm relay is activated.


3.5 Manual Operation


Manual operation of the process photometer is useful for maintenance, commissioning of the analyzer and when correction of alarm conditions during normal operation occur.

Manual operation of the process photometer is effected by pressing the button "Hand" on the touchscreen. During the internal zero adjustment of the photometer short delays can occur. Automatic operation is interrupted and the screen displays the manual mode (state: MANUAL). Simultaneously, the actual absorbance (extinction) value is displayed in the upper display.

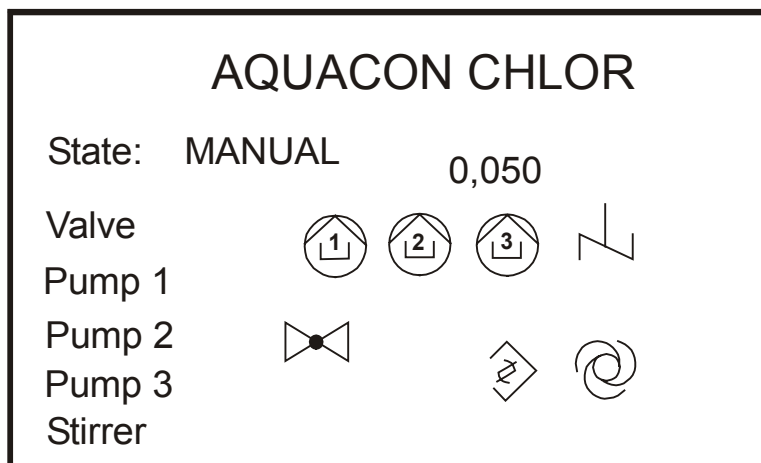


During manual operation, the pumps, the sample inlet valve and the stirrer can be activated/deactivated by touching the appropriate symbols. The active part will be displayed with inverse letters.

During manual operation, the mode can be switched to automatic mode and an analysis can be started by touching the symbol .

During manual operation, the mode can be switched to parameter mode by touching the symbol .

3.6 Display/Set Parameters

The parameter mode can be activated from automatic mode by touching the button "Param" or from manual mode by touching the symbol 

In parameter mode, a new screen will be displayed which shows the parameters Limit value 1, Limit value 2, Output mode, Output start and Output end.

AQUACON CHLOR		
Limit value 1:	0.30	Start
Limit value 2:	2.00	
Output mode:	4-20 mA	Hand
Output start:	0.00	>>
Output end:	2.00	


By touching the button " >> ", a second screen will be displayed with the parameters Sampling interval, Calibration factor, Rinse time, Reagent volume and 2. Parameter.

AQUACON CHLOR		
Sampling interval:	10	Start
Calib. factor:	1.00	
Rinse time:	15	Hand
Reagent volume:	250	<<
2. Parameter:	total	

By touching the button " << ", the first parameter screen will be displayed again.

All parameters are set to a certain value (factory settings), but can also be parametrized by the end-user (see the following chapters 3.6.1 – 3.6.8).

To change the parameters, the corresponding values must be touched. Then, a parameter specific screen opens where the new parameter values can be typed by touching the figures (except parameter "Output mode").

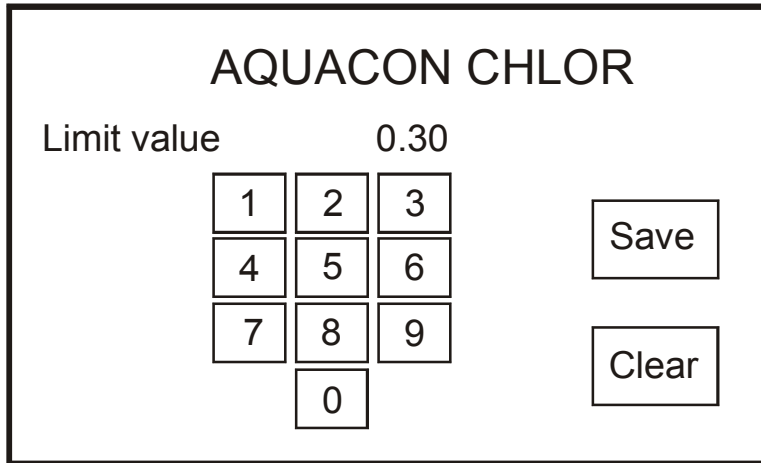

To leave the screen and confirm/save the new parameter value, the button "Save" must be touched.
To leave the screen without saving, the button "Clear" must be touched.

3.6.1 Limit Value 1 (min contact)

The limit relay 1 will be activated when the measured value for free chlorine is lower than the end-user defined limit value 1. The relay will be deactivated when the measured value is 60 % higher than the set limit value. The factory-predetermined limit is set to 0.30 ppm Cl₂.

A value between 0.00 and 9.99 ppm may be chosen, but only values lower than the upper measurement range are useful.

3.6.2 Limit Value 2 (max contact)

The limit relay 2 will activate when the measured value for total/bounded chlorine is higher than the end-user defined limit value 2. The limit value 2 is factory-predetermined to 2.00 ppm. A value between 0.00 and 9.99 ppm may be chosen, but only values lower than the upper measurement range are useful. If the limit value is higher than the alarm value the limit relay will not be activated.

3.6.3 Analog Output setting (mode, start value and end value)

Two analog current signal (0/4 - 20 mA), proportional to the measured values for free chlorine and for total chlorine or bounded chlorine, may be directed from the process photometer AQUACON CHLOR to remote recording/controlling devices. The mode, the start value and the end values of both analog outputs can be parametrized by the end-user. The mode of the analog output can be switched from 0-20 mA to 4-20 mA by touching of the corresponding value on the touchscreen. No further confirmation is required. The start and end values can be set to values between 0.00 and 9.99 ppm. The set end value must be higher than the set start value.

3.6.4 Sampling Interval

The sampling interval between two automatically initiated samples may be programmed. The factory-predetermined sample interval is set to 10 min. A values between 1 and 99 min. may be chosen.

3.6.5 Titer/Calibration Factor

The process photometer AQUACON CHLOR may be re-calibrated by entering a titer/calibration factor (see chapter 5.5). A value between 0.00 and 9.99 may be chosen.

3.6.6 Rinsing Time

The measuring chamber is rinsed for 15 seconds before an analysis takes place. The preset rinsing time may be altered by the end-user. A value between 15 and 99 seconds may be chosen.

Important:

Depending on the length of the sample inlet tube and the water flow rate, the rinsing time should be long enough to flush the sample lines and fill the measuring cuvette with fresh sample. A tube length of max. 5 m is recommended between sample valve and the analyzer.

3.6.7 Reagent Volume

The remaining reagent volume of the 250 ml reagent container is calculated and stored in memory by the microprocessor. A value between 0 and 999 ml may be chosen.

3.6.8 2. Parameter

The process photometer AQUACON CHLOR can be used for the measurement of the free chlorine concentration and of the total chlorine concentration or bounded chlorine concentration. If the 2. Parameter is set to “total”, the total chlorine concentration will be displayed. If the 2. Parameter is set to “bounded”, the bounded chlorine concentration will be displayed. The 2. Parameter can switched from “total” to “bounded” by touching of the corresponding word on the touchscreen. No further confirmation is required.

The automatic operation mode starts again when the button ”Start” is touched.

4 Switching Functions of the AQUACON CHLOR

CAUTION:


Before opening the cover below the process photometer display, the AQUACON CHLOR must be disconnected from the mains supply.

4.1 External Switching

The process photometer AQUACON CHLOR has a potential-free input contact which may be used to control the instrument from a remote position/device. When the input contact is closed the process photometer will automatically carry out an analysis, when the input contact is open the process photometer completes the actual analysis and stops. When the limit relay is activated and the process photometer is stopped by a remote position/device the limit relay will be inactivated after 15 minutes. The process analyzer is delivered with bridged external switching contact into female. For using external switching contact remove this bridge! During the interval between two analyses the process photometer may be activated by a short off/on impulse of the external contact.

4.2 Display in the standby mode

In the standby mode the display will show “H-E” and the last measured value (the value that was determined in that analysis before that one that was terminated by opening the external contact) when the external contact is open.

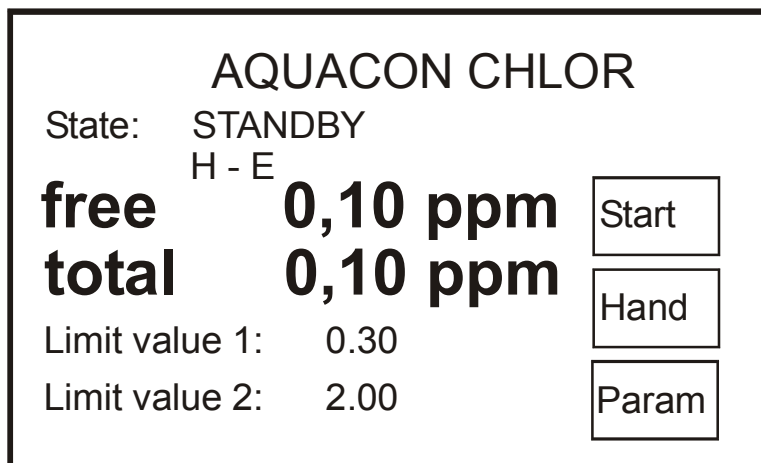

When an error message occurs this will be displayed additional to “H-E”.

4.3 Analysis state relay

The analysis state relay K 1 is activated during the time when the analyzer operates an analysis.

4.4 Limit Value Relay 1 and 2

The potential-free limit value relay K 2 is activated when the measured value for free chlorine is lower than the end-user defined value (min contact). The relay will be deactivated when the measured value is 60 % higher than the set limit value.

The potential-free limit value relay K 3 is activated when the measured value for total chlorine or bounded chlorine (depending of parameter setting, see chapter 3.6.8) is higher than the end-user defined value (max contact).

During the automatic operation mode, "Limit value 1" will be displayed when the measurement results for free chlorine are lower than the set limit value and "Limit value 2" will be displayed when the measurement results for total chlorine or bounded chlorine are higher than the set limit value.

4.5 Alarm Limit Relay

The potential-free alarm relay is activated when an alarm is exceeded within the process photometer. The alarm is caused by an error in the optical system, when the measurement range is exceeded or when the reagent volume falls below than 50 ml. The appropriate alarm message will be displayed as "ERROR E-1, ERROR E-2, ERROR E-3" or "ERROR E-4" (see also chapter 6).

4.6 Current Output

The process photometer AQUACON CHLOR delivers a current output, 0 or 4 to 20 mA, which is proportional to the measurement range selected by the end-user (see chapter 9.1). This current output may be used as input to remote recording devices, for data processing, controlling functions etc. The current output is independent of resistance load up to a value of 500 ohm. The start and end value of the current output signal can be set by the user within the measurement range.



Don't connect any external voltage to the connections of the current output. Failure to observe this information could result in damage to the equipment.

See above, " 3.6.3 Setting the Analog Output". To avoid resolution losses of the current output signal the user defined measuring range should be > 6 % of the total measurement range. The start value should be lower than the end value. Setting the start value higher than end value results in a constant output of 20 mA. Similarly, setting the end value lower than that of the start value results in a constant 0 or 4 mA output.

5 Start-up and Maintenance Instructions


CAUTION:

As soon as the analyzer is connected to the main supply, automatic operation commences. This is required for automatic restart of the analyzer in the event of a power failure. At start-up, it is necessary to access the Manual Operating mode by touching the "Hand" button as soon as the analyzer is connected to main supply and is operational.

5.1 Connection of sample water






1. Connect inlet and outlet connectors (6/4; 8/6) max. length 5 m
2. Connect power supply to device

Caution: see label on the housing for specified voltage

3. Select the sample inlet valve to "open" (press button  on the touchscreen)
4. Carefully open the manually-operated valve beneath the solenoid operated valve to set the sample flow (20-30 l/h)

Caution: Maximum sample pressure 10 bar!

5.2 Connection of reagent, bleeding of pumps and tubes

1. Open the reagent vessel top. Ensure that the pump tube is installed and the pump head is screwed down.
2. Switch on the stirrer (button ) and the first pump (button ) in order to fill the suction-lances and pressure-tubes (Sign: the extinction in the display is rising).
3. After filling the tubes switch off the pump and stirrer.
4. If there is a second or third reagent available, repeat step 1-3 with this reagents.
5. Rinse the measuring chamber by activating the sample inlet valve (button ) and stirrer (button ) in order to wash out the reagent entered while filling the tubes
6. Select automatic operation (button ). The device now operates in automatic mode and start the measurement.

Perform 2 to 3 analyses. Regard correct filling by observing the measurement outlet tube with the selected sample flow conditions. When satisfied that the system is performing correctly, the parameter settings may be carried out prior to automatic operation

5.3 Replenishment of Reagent

The reagent bottle may be replaced, after setting the analyzer to manual mode. Now the volume of reagent must be entered in "Param" mode step to 250 (if the volume of reagent 1 is 250 ml) or to 500 (if the volume of reagent 1 is 500 ml). See also chapter 3.6.7.

Important:

The handling with chemical standards and reagents can be dangerous. Before the reagent bottles are connected or replaced, it is necessary to read their specific MSDS (material safety data sheets).

5.4 Changing of Tube box

Replacement of the complete tube-box by pressing the brackets at the sides, take off the old box and give up a new box.

Important:

All tube boxes must be replaced after consumption of 5 bottles reagent or latest after 6 months.

5.5 Recalibration of the Process analyzer

Under normal conditions, a re-calibration of the process analyzer is not required since the reagent to sample ratio have been correctly determined at the time of manufacture. However should the need arise to verify the process analyzer, a standard solution may be introduced. In the unlikely event of a deviation from the introduced standard (incorrect reagent strength, pump tube aging, incorrect pump tube, contaminated measuring cell), a titer/calibration factor may be calculated as follows:

$$\text{titer/calibration factor} = \text{Standard solution value} : \text{Measured value}$$

Should the titer/calibration factor deviate by more than 20 % from 1, then a change of the tube box or a cleaning of the measurement chamber is maybe necessary.

5.6 Maintenance interval

A maintenance of the analyzer should be made after 5 consumed reagent bottles or latest after 6 month. A maintenance should include at least an optical control of the analyser, a function control and a change of the tube boxes. If necessary, the maintenance should also include a cleaning of the measurement chamber and of the injectors for the tube connection at the measurement chamber.

5.7 Shut down procedure

If the analyzer is shut down for an extended period of time, all reagents and samples should be removed out of tubings and the measurement chamber, and all tubings and the measurement chamber should be cleaned and flushed with deionized water.

6 Alarm Messages

Message in display	Description	ACTION
ERROR E -1	Error in the optical system; the analyzer operation is interrupted: - contaminated cuvette windows - defective light source - defective photodetector - no sample (NB Most likely cause of failure!)	Check sample inlet valve, clean the measuring chamber, call maintenance service.
ERROR E -2	Measurement range exceeded	Verify if chlorine concentration is too high. Check stirrer function.
ERROR E - 3	Reagent volume has dropped below the factory preset value of 50 ml. The operation of the analyzer remains unaffected until reagent is depleted.	Replace reagent soon.
ERROR E - 4	Reagent depleted. The analyzer results are no longer valid.	Replace reagent.
H -E	Remote operation activated	

7 Technical Data

Current output	2 x 0/4 - 20 mA, max. load 500 ohm
Display	240 x 128 dots, Touchscreen
Relays	1 x Alarm, potential-free 230 V/50 Hz, 3A 2 x Limit, potential-free 230 V/50 Hz, 3A 1 x Analysis state, potential-free 230 V/50 Hz, 3A
External Switching	potential-free contact, 18 V DC, ca. 4 mA
Power Supply	110 - 230 V -- 50/ 60 Hz
Power Consumption	approx. 16 VA
Dimensions	640 x 315 x 190 mm (H x W x D)
Protection	IP 65 (transmitter housing)
Connections	Plugs with circular connection 1,5 mm ²
Temperature	5° to 45°C, at consumption of reagents within 6 months

Since it is company policy to continuously improve its product range, we reserve the right to make changes in the product design without notification to its users

8 Specifications

Parameter	Chlorine (free chlorine and total/bounded chlorine)
Description	Automatic microprocessor controlled analyser for the photometric determination of free chlorine and total/bounded chlorine in water AQUACON CHLOR
Typical Applications	Control and supervision of chlorine plants and swimming pools
Method of working	Photometric measurement of free and total/bounded chlorine by the DPD method
Measuring Range	0,02 – 2,00 ppm
Resolution	0,01 ppm
Accuracy	2 % of end value
Reproducibility	1 % of end value
Zero-point Stability	automatic readjustment
Number of samples	1
Sample	
Operating Pressure	0,1 - 10 bar
Temperature	5 - 30 °C
Sample Volume	25 ml per analysis (without rinsing volume)
Sample Condition	clear, filtrated
Chemical Demands	pH 4 – 8
Drain	without pressure
Reagents	
Number	3
Storage Temperature	5 – 30°C
Usage/analysis	appr. 0,27 ml / 0,27 ml / 0,27 ml
Reagent volume	250 / 250 / 250 ml
Suitable for analysis	appr. 925
Analysis	
Cycle (approx.)	4 min (excl. rinsing time)
Sample interval	1 min - 99 min

9 Connection Diagram

9.1 Set 0/4 - 20 mA-Output




The 0/4 – 20 mA output can be set by changing the appropriate parameters (see chapter 3.6.3).

9.2 Connections

In – and outputs are available at circular connectors at the top of the device.



CAUTION: technical data !

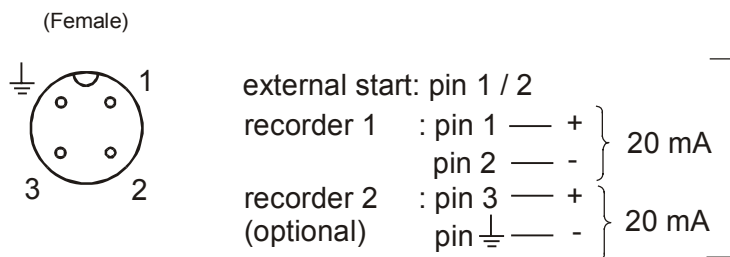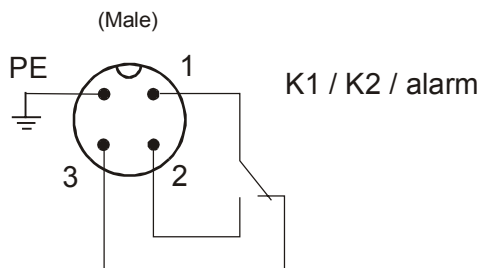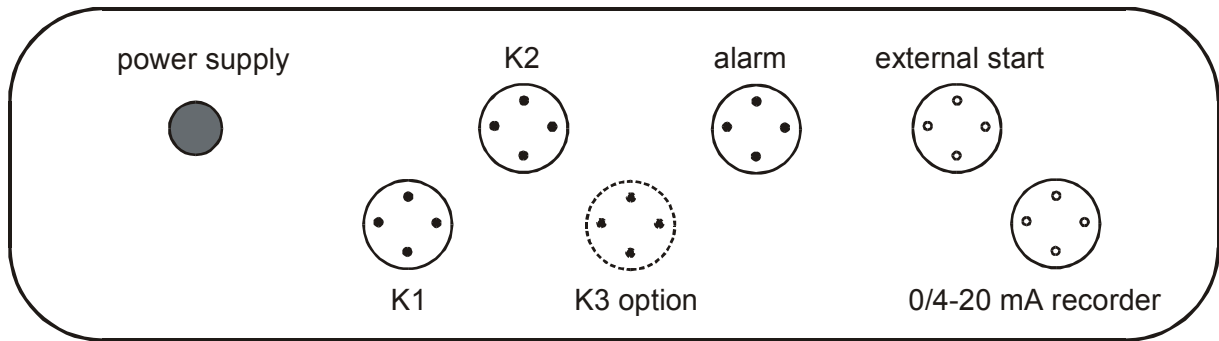

caution !

do not connect any voltage to these terminals

Power supply	Power supply (110 - 230 V, 50/60 Hz)	PE	protection earth
K1	Analysis status signal	K2	Limit value relay 1
external start	potential-free input contact	alarm	alarm limit relay
20 mA recorder 1	0/4 – 20 mA output (max. load 500 Ω)	K3	Limit value relay 2
20 mA recorder 2	0/4 – 20 mA output (max. load 500 Ω)		

9.3 Installation



WARNING

Only Qualified Personnel !

Only Specified Power Supply !

See required power supply as noted on instrument.

Observe local regulations!








Install a power supply that can be disconnected (plug, switch).

Take care for use of the protective covers for not used connectors.

Do not install measuring-or control cables in parallel or close distance in the same cable guide with power supply.

10 Appendix

10.1 Analysis cycle AQUACON CHLOR

Length	Operation					
				1	2	3
15 -99 s	Rinsing		X			
45 s	Stirring	X				
15 s	Filling		X			
10 s	Degasification	X				
~ 40 s	Automatic zero adjustment					
1 s	Dosing of Reagent 1	X		X		
1 s	Dosing of Reagent 2	X			X	
3 s	Mixing	X				
10 s	Measurement free chlorine					
1 s	Dosing of Reagent 3	X				X
3 s	Mixing	X				
10 s	Measurement total/bounded chlorine					
15 s	Rinsing	X	X			
45 s	Stirring	X				
20 s	Rinsing	X	X			
1 - 99 min.	Break time					

10.2 Spare part and consumable item list

Consumable item	Term	Quantity	Order No
Reagent 1 for AQUACON CHLOR	CL-R1001	250 ml	101 2725 01
Reagent 2 for AQUACON CHLOR (Buffering solution for free chlorine)	CL-R1002	250 ml	102 2725 01
Reagent 3 for AQUACON CHLOR (Buffering solution for total chlorine)	CL-R1003	250 ml	103 2725 01
Tube - box	SK10	1 piece	121 0037 01
Spare parts			Order No
Transmission pressure tubing	PT10	1 m	121 0014 01
Tube pump	SP10-2	1 piece	121 0008 02
Magnetic valve type 1 2/2 way (brass)	MV01-G	1 piece	121 0004 02
Magnetic stirring bar for measuring chamber			121 0044 01
Glass measuring cuvette			121 0045 01

Basic equipment of consumables are included in price

11 Troubleshooting Guide

Problem	Reason
On pressing the “automatic operation” key switch, the analyzer does not enter automatic analysis cycle.	<ul style="list-style-type: none"> • The contact bridge for external switch function (see 4.1) is not installed or has no contact switch. “H-E” appears in the display. Solution: install bridge • The measurement chamber is empty (i.e. no sample) or the sample is strongly coloured or contaminated. “ERROR E-1” appears in the display. The analyzer will automatically re-enter the measurement cycle following the sample interval and reset the alarm Solution: clean the measurement cuvette with 10% hydrochloric acid, check sample flow, check optical components (open measurement chamber and set analyzer to manual operation. The displayed absorption should increase when the optical path is restricted by an opaque object) • Reagent is depleted or incorrect reagent volume entered. “ERROR E-4” appears in the display. Solution: Replace reagent if depleted and reset reagent volume to the correct volume via parameter input..
The analyzer continuously displays setpoint overrange	<ul style="list-style-type: none"> • The setpoint selected is below the measured value. “ERROR E-2” appears in the display. Solution: Verify the measured value by alternative analysis Increase setpoint value
The values displayed are erratic even though the actual measured variable is constant	<ul style="list-style-type: none"> • Reagent container is not opened to atmosphere. Vacuum drawn on the reagent vessel. Solution: Open the reagent bottle cap to release vacuum. Do not retighten. • Magnetic stirrer immobilised Solution: Open the measurement cuvette. Stirrer is switched on by manual operation. Check that the magnetic follower is not jammed by loosening gently with a glass stirring rod. Increase the motor voltage by adjusting the appropriate potentiometer in the terminal box. If the problem is not rectified, call Service. • Reagent tubing is kinked or the feed tube in the reagent container is pushed against the bottom of the vessel. Solution: Straighten all tubes and tilt feed tube away from the bottom of the reagent container • Sample pressure is too low to effectively flush the measuring cuvette after analysis The cuvette does not overflow or overflows very slowly during flushing cycle. Solution: Increase the sample pressure to above 0.1 bar. Open sample inlet valve to allow 100 - 200 ml water flow per analysis cycle..
A calibration factor differing widely from 1.00 must be used to achieve correct results	<ul style="list-style-type: none"> • Reagent is contaminated, reagent has expired, pump tube has exceeded. Solution: replace reagent; replace pump tubing.
Pumps or solenoid operated valves do not operate in manual mode	<ul style="list-style-type: none"> • a limited number of electromechanical drives may be simultaneously selected to prevent electrical overload. Solution: Switch off other electromechanical drives and try again.